Oxford Carriage Door Ltd.

GUIDELINES FOR ARCH TOP TEMPLATES

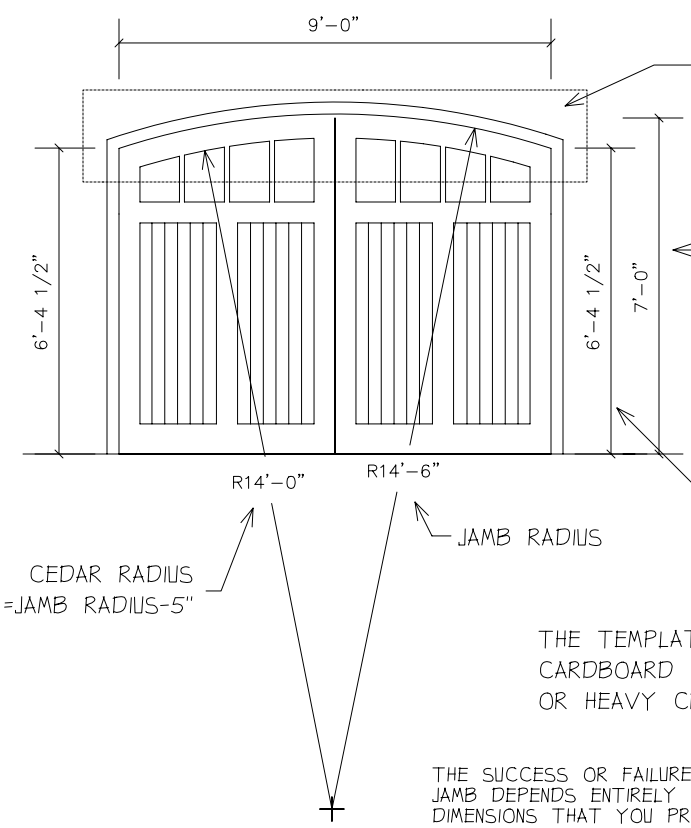

TEMPLATE
HELD TO INSIDE OF JAMB
TRACE BOTTOM SIDE OF JAMB
AND SIDE JAMBS

DISTANCE FROM FLOOR TO
HIGHEST POINT OF ARCH AS
DRAWN ON TEMPLATE.
THIS MEASUREMENT MUST BE
ADJSTED TO COMPENSATE FOR
HUMPS OR DIPS IN THE FLOOR

DISTANCE FROM FLOOR TO
LOWEST POINT OF ARCH AS
DRAWN ON TEMPLATE.
INCLUDE MEASUREMENTS FOR
BOTH SIDES OF ARCH

THE TEMPLATE CAN DRAWN ON PLYWOOD,
CARDBOARD IN GOOD CONDITION,
OR HEAVY CRAFT PAPER.

THE SUCCESS OR FAILURE TO MATCH THE ARCH ON THE DOOR TO THE ARCH OF THE JAMB DEPENDS ENTIRELY ON THE ACCURACY OF THE TEMPLATE AND THE DIMENSIONS THAT YOU PROVIDE.

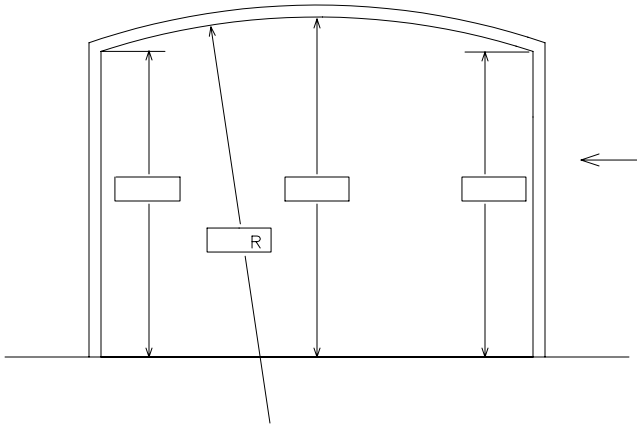

IF THE EXACT RADIUS OF THE ARCH
IS KNOWN, THERE IS NO NEED TO
MAKE A TEMPLATE. SIMPLY PROVIDE THE
THE INFORMATION AS SHOWN ON THE
DRAWING TO THE LEFT.